

# Circulation Controller CC

Installation and operating instructions



**Read carefully before installation, commissioning and operation**

## Content

<b>A. Safty instructions</b>	<b>3</b>	<b>5. Protective functions</b>	<b>20</b>
A.1. EC declaration of conformity	3	5.1. Seizing protection	20
A.2. General instructions	3	5.6. Anti-Legionella	20
A.3. Explanation of symbols	3		
A.4. Changes to the unit	4	<b>6. Special functions</b>	<b>21</b>
A.5. Warranty and liability	4	6.2. Signal V1	21
<b>B. Description of controller</b>	<b>5</b>	6.2.1. Type of signal	21
B.1. Specifications	5	6.2.2. Profile	21
B.2. Temperature resistance table for Pt1000 sensors	5	6.2.3. Output Signal	22
B.3. About the controller	6	6.2.4. 0-10V off / PWM off	22
B.4. Versions	6	6.2.5. 0-10V on / PWM on	22
B.5. Scope of supply	6	6.2.6. 0-10V Max / PWM Max	22
B.6. Disposal and pollutants	6	6.2.8. Show signal	22
B.7. Hydraulic variants	7	6.3. Speed control	24
<b>C. Installation</b>	<b>8</b>	6.3.1. Speed control V1	24
C.1. Wall installation	8	6.3.2. Purging time	25
C.2. Electrical connection	9	6.3.3. Sweep time	25
C.3. Installing the temperature sensors	11	6.3.4. max. speed	25
<b>D. Terminal connection diagrams</b>	<b>12</b>	6.3.5. min. speed	25
<b>E. Operation</b>	<b>13</b>	6.3.6. Setpoint / $\Delta T_{S1-S3}$	25
E.1. Display and Input	13	6.4. Time and Date	26
E.2. Parametrisation	14	6.5. Sensor calibration	26
E.3. Free commissioning	14	6.6. Commissioning	26
E.4. Menu sequence and menu structure	15	6.7. Factory settings	26
<b>1. Measurement values</b>	<b>16</b>	6.10. Daylight saving time	26
<b>2. Statistics</b>	<b>17</b>	6.11. Eco display mode	26
2.1. Operating hours	17	<b>7. Menu lock</b>	<b>27</b>
2.4. Message log	17	<b>8. Service values</b>	<b>28</b>
2.5. Reset / clear	17	<b>9. Language</b>	<b>28</b>
<b>3. Operating modes</b>	<b>18</b>	<b>Z.1. Malfunctions with error messages</b>	<b>29</b>
3.1. Automatic	18	<b>Z.2. Replacing the fuse</b>	<b>30</b>
3.2. Manual	18	<b>Z.3. Maintenance</b>	<b>31</b>
3.3. Off	18		
<b>4. Settings</b>	<b>19</b>		
4.1. Tset	19		
4.2. Mode times	19		

# Safety instructions

## A.1. - EC declaration of conformity

By affixing the CE mark to the unit the manufacturer declares that the CC conforms to the following relevant safety regulations:

- EC low voltage directive 2006/95/EC
- EC electromagnetic compatibility directive 2004/108/EC

Conformity has been verified and the corresponding documentation and the EC declaration of conformity are kept on file by the manufacturer.

## A.2. - General instructions

### It is essential that you read this!

These installation and operating instructions contain basic instructions and important information regarding safety, installation, commissioning, maintenance and the optimal use of the unit. Therefore these instructions must be read completely and understood by the installation technician/specialist and by the system user before installation, commissioning and operation of the unit.

The valid accident prevention regulations, the regulations of the local power utility, the applicable standards and the installation and operating instructions of the additional system components must also be observed. The controller does not under any circumstances replace any safety devices to be provided by the customer!

Installation, electrical connection, commissioning and maintenance of the unit may only be carried out by specialists with the appropriate qualification.

**For the user:** Make sure that the specialist gives you detailed information on the function and operation of the controller. Always keep these instructions in the vicinity of the controller.

## A.3. - Explanation of symbols



Failure to observe these instructions can result in danger to life from electric voltage.



Failure to observe these instructions can result in serious damage to health such as scalding, or even life-threatening injuries.



Failure to observe these instructions can result in destruction of the unit or the system, or damage to the environment.



Information which is especially important for the function and optimal use of the unit and the system.

# Safety instructions

## A.4. - Changes to the unit



Changes to the unit can compromise the safety and function of the unit or the entire system.

- Changes, additions to or conversion of the unit are not permitted without the written permission from the manufacturer
- It is likewise not permitted to install additional components that have not been tested together with the unit
- If it becomes clear that safe operation of the unit is no longer possible, for example because of damage to the housing, then turn the controller off immediately
- Any parts of the unit or accessories that are not in perfect condition must be exchanged immediately
- Use only original spare parts and accessories from the manufacturer
- Markings made on the unit at the factory must not be altered, removed or made illegible
- Only the settings actually described in these instructions may be made on the controller

## A.5. - Warranty and liability

The controller has been manufactured and tested with regard to high quality and safety requirements. The unit is subject to the statutory guarantee period of two years from the date of sale.

The warranty and liability shall not include, however, any injury to persons or material damage that is attributable to one or more of the following causes:

- Failure to observe these installation and operating instructions
- Improper installation, commissioning, maintenance and operation
- Improperly executed repairs
- Unauthorised structural changes to the unit
- Installation of additional components that have not been tested together with the unit
- Any damage resulting from continued use of the unit despite an obvious defect
- Failure to use original spare parts and accessories
- Use of the device for other than its intended purpose
- Operation above or below the limit values listed in the specifications
- Force majeure

# Description of controller

## B.1. - Specifications

Mains voltage	230 AC +/- 10 %
Mains frequency	50 - 60 Hz
Power consumption	~ 1.5VA
Internal fuse	2A slow blow 250V
Protection category	IP40
Protection class	II
Overvoltage Category	II
Degree of Pollution Category	II

mechanical relay 460VA for AC1 / 460W for AC3	1
0-10V output, tolerance 10%, 10 k $\Omega$ load or PWM output freq. 1 kHz, level 10 V	1
PT1000 sensor input measuring range -40 °C to 300 °C	3

### Permissible cable length of sensors and appliances:

sensor S1 and S2 (storage sensor)	< 30 m
sensors S3 (circulation sensor)	< 10 m
PWM / 0...10V	< 3 m
mechanical relay	< 10 m

### Permissible ambient conditions:

Ambient temperature	
• for controller operation	0 °C ... 40 °C
• for transport/storage	0 °C ... 60 °C
Air humidity	
• for controller operation	max. 85 % rel. humidity at 25 °C
• for transport/storage	no moisture condensation permitted

### Other specifications and dimensions

Housing design	2-part, ABS plastic
Installation methods	Wall installation
Overall dimensions	115mm x 86mm x 45mm
Aperture installation dimensions	108mm x 82mm x 25.2mm
Display	Fully graphical display, 128 x 64 dots
Operation	4 entry keys

## B.2. - Temperature resistance table for Pt1000 sensors

°C	0	10	20	30	40	50	60	70	80	90	100
$\Omega$	1000	1039	1077	1116	1155	1194	1232	1270	1308	1347	1385

# Description of controller

## B.5. - About the controller

The Circulation Controller CC facilitates efficient use and function control of your solar or heating system. The device is impressive most of all for its functionality and simple, self-explanatory operation. For each step in the input process the individual entry keys are assigned to appropriate functions and explained. The controller menu contains headwords for the measured values and settings, as well as help texts or clearly-structured graphics.

The CC can be used as a Circulation Controller for the various system variants illustrated and explained under B.5.

Important characteristics of the CC:

- Depiction of graphics and texts in a lighted display
- Simple viewing of the current measurement values
- Analysis and monitoring of the system by means of statistical graphics, etc.
- Extensive setting menus with explanations
- Menu block can be activated to prevent unintentional changes of settings
- Resetting to factory settings

## B.3. - Scope of supply

- Circulation Controller CC
- 2 Screws 3,5 x 35mm, 2 plugs S6 for wall installation
- 4 strain relief clips with 8 screws, replacement fuse 2A slow blow
- 1 connection clamp for PE terminal block.
- Installation and operating instructions CC

Additionally available:

- Pt1000 temperature sensors, immersion sleeves, overvoltage protection, Pump E3 / PWM 4-27W - article number 06177

## B.4. - Disposal and pollutants

The unit conforms to the European RoHS directive 2011/65/EU for the restriction of the use of certain hazardous substances in electrical and electronic equipment.



Caution


The unit must not under any circumstances be disposed of with ordinary household refuse. Dispose of the unit only at appropriate collection points or ship it back to the seller or manufacturer.

# Description of controller

## B.6. - Hydraulic variants



The following illustrations should be viewed only as schematic diagrams showing the respective hydraulic systems, and do not claim to be complete. The controller does not replace safety devices under any circumstances. Depending on the specific application, additional system components and safety components may be mandatory, such as check valves, non-return valves, safety temperature limiters, scalding protectors, etc., and must therefore be provided.

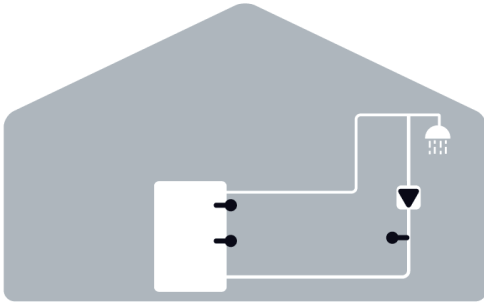


# Installation

## C.1 Wall installation



Install the controller only in dry areas and under the ambient conditions described under 2.1 “Specifications”. Carry out the following steps:

### C.1.1

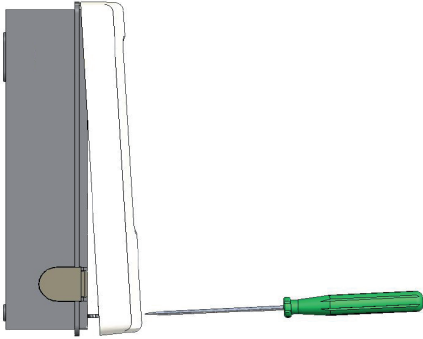


1. Unscrew cover screw completely

2. Carefully pull upper part of housing from lower part.

3. Set upper part of housing aside, being sure not to touch the electronics when doing so.

4. Hold the lower part of the housing (C.1.2) up to the selected position and mark the 2 mounting holes. Make sure that the wall surface is as even as possible so that the housing does not become distorted when it is screwed on.

### C.1.2

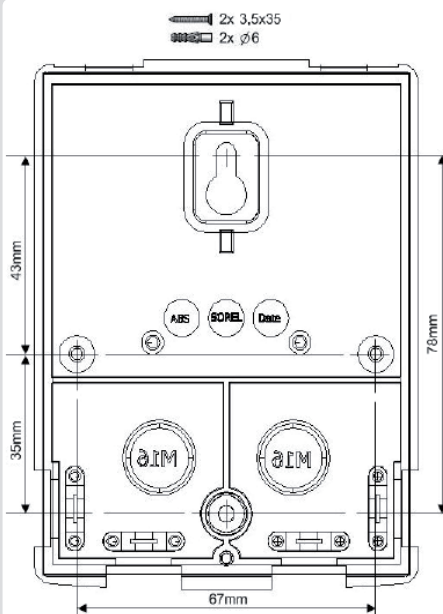

5. Using a drill and size 6 bit, drill 2 holes at the points marked on the wall and push in the plugs. Also possible is the installation with 4 drill holes.

6. Insert the upper screw and screw it in slightly.

7. Fit the upper part of the housing and insert the other screws.

8. Align the housing and tighten the screws.



# Installation

## C.2 Electrical connection



Before working on the unit, switch off the power supply and secure it against being switched on again! Check for the absence of power! Electrical connections may only be made by a specialist and in compliance with the applicable regulations. Do not use the controller if the housing shows visible damage.



Low-voltage cables such as temperature sensor cables must be routed separately from mains voltage cables. Feed temperature sensor cables only into the left-hand side of the unit, and mains voltage cables only into the right-hand side.



The customer must provide an all-pole disconnecting device, e.g. a heating emergency switch.



The cables being connected to the unit must not be stripped by more than 55mm, and the cable jacket must reach into the housing just to the other side of the strain relief.



We recommend the use of flexible cables to ease the installation in the clamp room.

### C.2.1



#### C.2.1.a




1. Select necessary program/hydraulics (see section D)
2. Strip cables by 55mm max., insert, fit the strain relief devices, strip the last 9-10 mm of the wires. (Fig. C.2.1)
3. Open controller as described under fig. C.1.1, insert cables and install strain reliefs
4. Install PE terminal block (see fig. 2.1.a).

continued on  
next page

# Installation

## C.2.1.c

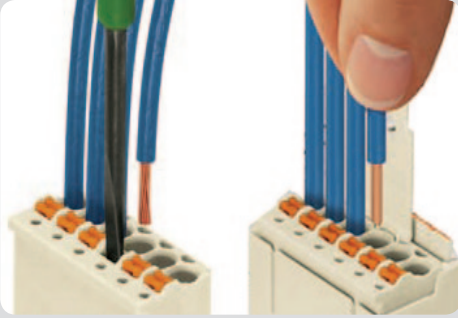

5. Connect the female connector block 's clamp connections as described in the terminal connection plans. When using stranded cables, use a small screw driver and push the orange buttons while inserting (see fig. C.2.1.c). When using solid cable or end splice, just push the cables in (see fig. C.2.1.c).
6. Plug Female connectors into onboard headers.
7. Hinge the upper part of the casing on the top of the lower part and close the casing gently.
8. Fasten with screw.
9. Switch on mains voltage and place controller in operation.

# Installation

## C.3 Installing the temperature sensors

The controller operates with Pt1000 temperature sensors which are accurate to the degree, thus ensuring optimal control of system functions.



Caution

Position the sensor precisely in the area to be measured!  
Only use immersion, pipe-mounted or flat-mounted sensors suitable for the specific area of application with the appropriate permissible temperature range.



Caution

The temperature sensor cables must be routed separately from mains voltage cables, and must not, for example, be routed in the same cable duct!



Caution

The line of S1 can be extended if needed to a maximum of 30m using a cable with a cross-section of at least  $0.75\text{mm}^2$ . The lines of S2 and S3 can be extended if needed to a maximum of 10m using a cable with a cross-section of at least  $0.75\text{mm}^2$ . Make sure that there is no contact resistance!

# Installation


## D Terminal connection diagrams



Low voltage 230VAC



Mains voltages max. 12V

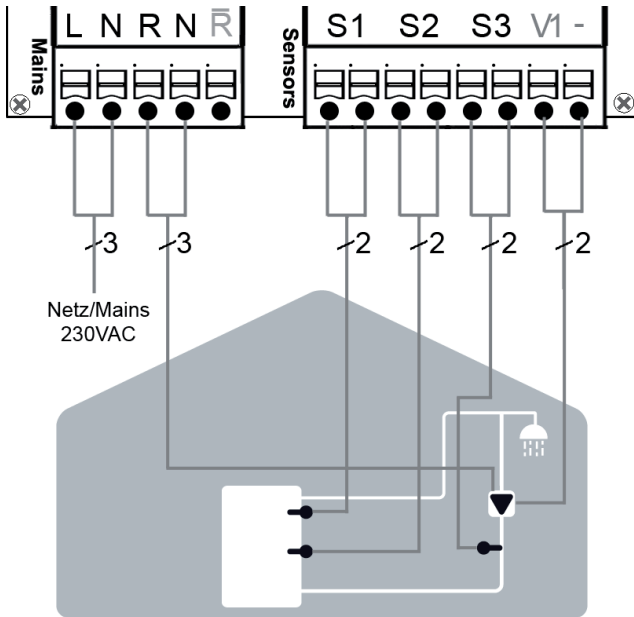

**Low voltage** max. 12VAC/DC connection

<u>Terminal:</u>	<u>Connection for:</u>
S1 (2x)	Sensor 1 storage top
S2 (2x)	FSensor 1 storage center (optional)
S3 (2x)	Sensor 3 Circulation

The polarity of the sensors S1-S3 is freely selectable.

V1	0-10V/PWM Circulationpump
-	0-10V/PWM Mass


**Mains voltages** 230VAC 50-60Hz

<u>Terminal:</u>	<u>Connection for:</u>
L	Mains phase conductor L
N	Mains neutral conductor N
R	Pump phase conductor L
N	Pump neutral conductor N
R	Break contact

The **PE protective conductor** must be connected to the PE metal terminal block!

# Operation

## E.1 Display and Input

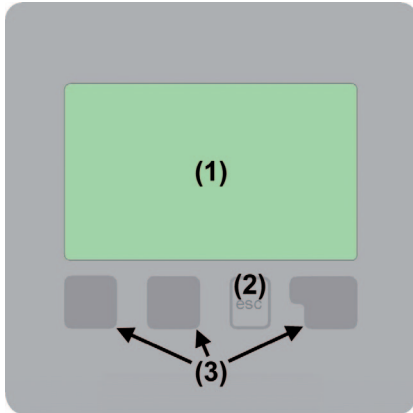






The display (1), with its extensive text and graphics mode, is almost self-explanatory, allowing easy operation of the controller.

Entries are made using four keys (2+3), which are assigned to different functions depending on the situation. The “esc” key (2) is used to cancel an entry or to exit a menu.

If applicable there will be a request for confirmation as to whether the changes which have been made should be saved.

Display symbols:

	Pump (rotates in operation)
	Storage tank
	Temperature sensor
	Warning / error message
	New information available

The function of each of the other three keys (3) is shown in the display line directly above the keys; the right-hand key generally has a confirmation and selection function.

Examples of key functions:

+/- = increase/reduce values

▼/▲ = scroll menu down/up

yes/no = approve/reject

Info = additional information

Back = to previous screen

ok = confirm selection

Confirm= confirm setting

## E.2 Parametrisation



The first time the controller is turned on and after the language and time are set, a query appears as to whether you want to parametrise the controller using the commissioning help or not. The commissioning help can also be terminated or called up again at any time in the special functions menu. The commissioning help guides you through the necessary basic settings in the correct order, and pro-

vides brief descriptions of each parameter in the display. Pressing the “esc” key takes you back to the previous value so you can look at the selected setting again or adjust it if desired. Pressing the “esc” more than once takes you back step by step to the selection mode, thus cancelling the commissioning help. Finally, under operating mode menu 4.2 “Manual” should be used to test the switch outputs with the consumers connected, and to check the sensor values for plausibility. Then switch on automatic mode.



**Caution**

Observe the explanations for the the individual parameters on the following pages, and check whether further settings are necessary for your application.

## E.3 Free commissioning

If you decide not to use the commissioning help, you should make the necessary settings in the following sequence:

- Menu 9. Language
- Menu 6.4 Time and date
- Menu 4. Settings, all values
- Menu 5. Protective functions if adaptations are necessary
- Menu 6. Special functions if additional changes are necessary

Finally, menu 4.2. under operating mode “Manual” should be used to test the switch outputs with the consumers connected, and to check the sensor values for plausibility. Then switch on automatic mode.




**Caution**

Observe the explanations for the the individual parameters on the following pages, and check whether further settings are necessary for your application.

# Operation

## E.4 Menu sequence and menu structure

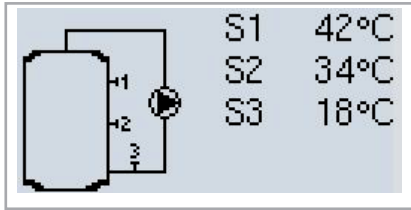

The graphics or overview mode appears when no key has been pressed for 2 minutes, or when the main menu is exited by pressing “esc”.



Pressing a key in graphics or overview mode takes you directly to the main menu. The following menu items are then available for selection there:



### 1. Measurements

Current temperature values with explanations

### 2. Statistics

Function control of the system with operating hours, etc.

### 3. Operating modes

Automatic mode, manual mode or switch unit off

### 4. Settings

Set parameters needed for normal operation

### 5. Protections

Solar and frost protection, recooling, anti-seizing protection

### 6. Special functions

Program selection, sensor calibration, clock, additional sensor, etc.

### 7. Menu lock

Against unintentional setting changes at critical points

### 8. Service values



For diagnosis in the event of an error

### 9. Language

Select the menu language

# Measurement values

## 1. - Measurement values

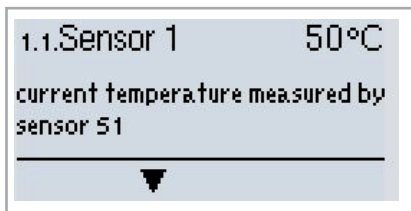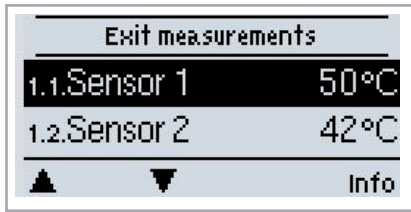

The menu “1. Measurement values” serves to display the currently measured temperatures.

The menu is closed by pressing “esc” or selecting “Exit measurements”.

Selecting “Details” leads to a brief help text explaining the measurement values.

Selecting “Overview” or “esc” exits the Info mode.

If “Error” appears on the display instead of the measurement value, then there may be a defective or incorrect temperature sensor.



Caution

If the cables are too long or the sensors are not placed optimally, the result may be small deviations in the measurement values. In this case the display values can be compensated for by making entries on the controller. Follow the instructions under 7.3.

What measurement values are displayed depends on the selected program, the connected sensors and the specific device design.



# Statistics

## 2. - Statistics



The menu "2. Statistics" is used for function control and long-term monitoring of the system.

The menu is closed by pressing "esc" or selecting "Exit statistics".



Caution

For analysis of the system data it is essential for the time to be set accurately on the controller. Please note that the clock continues for about 24 hours if the mains voltage is interrupted, and must be reset afterwards. Improper operation or an incorrect time may result in data being deleted, recorded incorrectly or overwritten. The manufacturer accepts no liability for the recorded data!

### 2.1. - Operating hours

Display of operating hours of the solar pump connected to the controller; various time ranges (day-year) are available.

### 2.2. - Message log


Display of the last 20 errors occurring in the system with indication of date and time.

### 2.3. - Reset / clear

Resetting and deleting the individual analyses. The function "All statistics" clears all analyses but not the error messages.

# Operating modes

## 3. - Operating modes

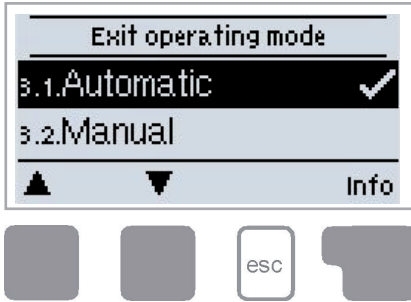

In menu “3. Operating modes” the controller can either be placed in automatic mode, switched off, or placed in a manual operating mode.

The menu is closed by pressing “esc” or selecting “Exit operating modes”.

### 3.1. - Automatic

Automatic mode is the normal operating mode of the controller. Only automatic mode provides proper controller function taking into account the current temperatures and the parameters that have been set! After an interruption of the mains voltage the controller automatically returns to the last operating mode selected!

### 3.2. - Manual

The relay and thus the connected consumer are switched on and off by pressing a key, with no regard to the current temperatures and the parameters which have been set. The measured temperatures are also shown to provide an overview and function control.



When operating mode “Manual” is activated, the current temperatures and the selected parameters are no longer considered. There is a danger of scalding or serious damage to the system. The operating mode “Manual” may only be used by specialists for brief function tests or during commissioning!

### 3.3. - Off



When the operating mode “Off” is activated, all controller functions are switched off. The measured temperatures continue to be shown to provide an overview.

# Settings

## 4. - Settings



The necessary basic settings required for the control function are made in menu "4. Settings".



Caution

This does not under any circumstances replace the safety facilities to be provided by the customer!

The menu is closed by pressing "esc" or selecting "Exit settings".



Caution

Various settings can be made depending on the selection of hydraulic variant. The following pages contain generally valid descriptions for the settings.

### 4.1. - Tset

Setpoint at S3

The controller CC attempts to reach and maintain a constant temperature in the circulation by controlling the speed of the hot water pump.

### 4.2. - Mode times

This menu is used to select the mode times for the circulationpump; three time periods can be specified for each weekday and copied over to the following days.



Caution

In times that are not released, the circulation is not active. Note that after completion of a circulation period, the circulation continues until the switch-off condition is reached.

# Protective functions

## 5. - Protective functions



Menu “5. Protective functions” can be used to activate and set various protective functions.



Caution

This does not under any circumstances replace the safety facilities to be provided by the customer!

The menu is closed by pressing “esc” or selecting “Exit settings”.

### 5.1. - Seizing protection

If the Seizing protection is activated, then the controller switches the associated pump and/or valve on every day at 12:00 or on Sundays at 12:00 for 5 seconds in order to prevent the pump and/or valve from sticking after an extended stationary period.

### 5.6. - Antilegionella

#### 5.6.1. - Antilegionella

The antilegionella function heats up the system for legionella protection.

#### 5.6.2. - AL Tset

This temperatur must be present for residence time at all corresponding sensors.

#### 5.6.3. - AL residence time

For this period of time the Tset temperature must be present at all corresponding sensors for successful AL heating.

#### 5.6.4. - Last AL heat

This shows the las successful AL heating time.

#### 5.6.5. - AL times

Antilegionelle can be start manualy.

# Special functions

## 6. - Special functions



Menu "6. Special functions" is used to set basic items and expanded functions.



Other than the time all settings may only be made by a specialist.

The menu is closed by pressing "esc" or selecting "Exit special functions".



Menu enumerations may vary according to CC version used.

### 6.2. - Signal V1

This menu contains the settings for 0-10V or PWM pump.



When selecting this submenu, you may be prompted to save the speed control settings.

#### 6.2.1. - Type of signal

**0-10V:** Speed control for special pumps via output V1 (e.g. High efficiency pumps) by means of a 0-10V. Relay output R1 (230AC) is switched on for power supply when output V1 is switched on.

**PWM:** Speed control for special pumps via output V1 (e.g. High efficiency pumps) by means of a PWM signal. Relay output R1 (230AC) is switched on for power supply when output V1 is switched on.

#### 6.2.2. - Profile

In this menu, preconfigured profiles for various pumps can be selected. Alternatively, all settings can be done manually. Please note that individual settings are still possible even when a profile has been selected.

# Special functions

## 6.2.3. - Output Signal

This menu determines the type of pump used: Solar pumps perform at their highest power when the signal is also maxed, heating pump on the other hand are set to highest power when the control signal is at the lowest. Solar = normal, heating = Inverted.  
*Settings range: Normal, Inverted / Default setting: Normal*

When Output signal PWM is selected: / When Output signal 0-10V is selected:

## 6.2.4. - 0-10V off / PWM off

This signal / this voltage is put out when the pump is switched off (Pumps that can detect cable break need a minimum signal).

## 6.2.5. - 0-10V on / PWM on

This signal / this voltage is needed to turn the pump on at minimum speed / minimum voltage.


## 6.2.6. - 0-10V Max / PWM Max

This determines the output signal / the output voltage for the highest speed of the pump, that is used e.g. during purging or manual operation.

## 6.2.8. - Show signal

Displays the set signal in text and a graphical diagram.


## 7.2.8.a Example for pump settings

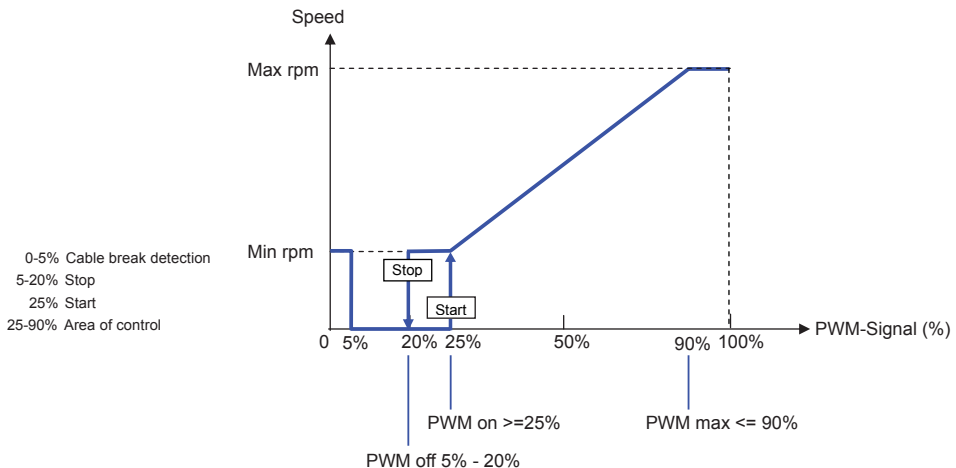


# Special functions

## 7.2.8.b Technical data PWM and 0-10V

### Technical data PWM:

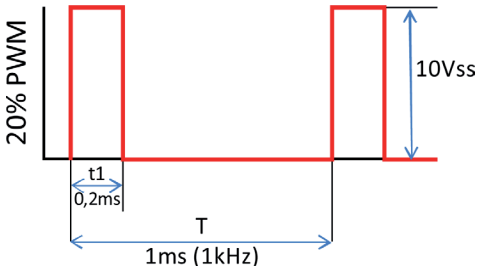

PWM: 20% to 100%, 1kHz  
Designed for a load of  
10K Ohm

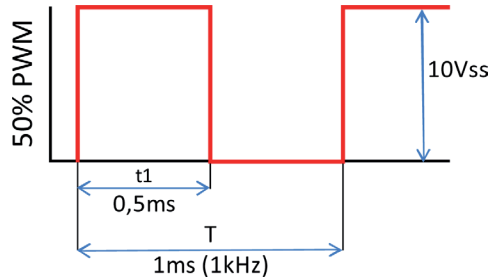

### Technical data 0-10V:

0-10V: 2V to 10V (20% to 100%)  
Designed for a load of 10K Ohm.

10V = 100% Speed

5V = 50% Speed

2V = 20% Speed

0V = Off

# Special functions

## 6.3. - Speed control

If the speed control is activated, the CC makes it possible to vary the speed of standard pumps at relay by means of special internal electronics.



This function should only be activated by a specialist. Depending on the pump and pump stage used, the minimum speed should not be set too low, because otherwise the pump or the system may be damaged. The information provided by the relevant manufacturer must also be observed! If in doubt, the min. speed and the pump stage should generally be set too high rather than too low.

### 6.3.1. - Speed control mode

The following speed variants are available here:

**Off:** There is no speed control. The connected pump is only switched on or off with full speed.

**Mode V1:** After the purging time the controller switches to the set max. speed. If the temperature difference  $\Delta T$  between the reference sensors (storage sensor S1 and circulation sensor S3) is smaller than the set value  $\Delta T$  S1-S3, then the speed is decreased.

If the temperature difference between the reference sensors is greater than the set value (Switch-on temperature difference  $\Delta T$  S1-S3), then the speed is increased.

**Mode V2:** After the purging time the controller switches to the set min. speed. If the temperature difference  $\Delta T$  between the reference sensors (storage sensor S1 and circulation sensor S3) is greater than the set value, then the speed is increased. If the temperature difference  $\Delta T$  between the reference sensors is below the set value, then the speed is decreased.

**Mode V3:** After the purging time the controller switches to the set min. speed. If the temperature at the circulation sensor is greater than the setpoint to be set subsequently, then the speed is increased. If the temperature at the circulation sensor is less than the setpoint to be set subsequently, then the speed is decreased.



## Special functions

### 6.3.2. - Purging time

During this time period, the pump is running with full speed (100%) to ensure trouble-free startup. After this time has passed, the pump is set to speed control and is set to max. speed or min speed, depending on the speed control variant. Purging time can not be applied with PWM or 0-10V output.

### 6.3.3. - Sweep time

Sweep time determines the inertia of the speed control to prevent strong fluctuations in temperature. Sweep time is the time span for a complete change from minimum to maximum pump speed.

### 6.3.4. - max. speed

The maximum speed of the pump is specified here. During the setting the pump runs at the specified speed and the flow rate can be determined.



Caution

The indicated percentages are guide values that may vary to a greater or lesser extent depending on the system, pump and pump stage. 100% is the maximum voltage/frequency of the controller.

### 6.3.5. - min. speed

The minimum speed of the pump at relay R1 is specified here. During the setting the pump runs at the specified speed and the flow rate can be determined.



Caution

The indicated percentages are guide values that may vary to a greater or lesser extent depending on the system, pump and pump stage. 100% is the maximum voltage/frequency of the controller.

### 6.3.6. - Setpoint / $\Delta T_{S1-S3}$

In speed mode, M1 and M2 the set deltaT between the storage sensor S1 and circulation sensor S3 is the controlled variable. If the set deltaT falls below, the speed is increased. When exceeding this value, the speed is reduced. In mode M3 the temperature set here is the control variable for the speed of the circulation pump. If this temperature is exceeded, the speed is reduced. If temperature falls below this setpoint, the speed is increased.

# Special functions

## 6.4. - Time and Date

This menu is used to set the current time and date.



Caution

For analysis of the system data it is essential for the time to be set accurately on the controller. Please note that the clock has a 24 hour battery and must be reset if the power was cut for a longer period.

## 6.5. - Sensor calibration

Deviations in the temperature values displayed, for example due to cables which are too long or sensors which are not positioned optimally, can be compensated for manually here. The settings can be made for each individual sensor in steps of 0.5°C.



Caution

Settings are only necessary in special cases at the time of initial commissioning by the specialist. Incorrect measurement values can lead to unpredictable errors.

## 6.6. - Commissioning

Starting the commissioning help guides you in the correct order through the basic settings necessary for commissioning, and provides brief descriptions of each parameter in the display. Pressing the “esc” key takes you back to the previous value so you can look at the selected setting again or adjust it if desired. Pressing the “esc” more than once takes you back to the selection mode, thus cancelling the commissioning help.



Caution

May only be started by a specialist during commissioning! Observe the explanations for the the individual parameters in these instructions, and check whether further settings are necessary for your application.

## 6.7. - Factory settings

All of the settings that have been made can be reset, thus returning the controller to its delivery state.



Caution

The entire parametrisation, analyses, etc. of the controller will be lost irrevocably. The controller must then be commissioned once again.

## 6.10. - Daylight saving time

When this function is active, the controller's clock changes automatically to and from DST.

## 6.11. - Eco display mode

When this function is active, the controller's backlight is automatically switched off when no button has been pressed for 2 minutes.



Caution

If a message is waiting, the backlight is not switched off.

# Menu lock

## 7. - Menu lock



Menu “7. Menu lock” can be used to secure the controller against unintentional changing of the set values.



The menu is closed by pressing “esc” or selecting “Exit menu lock”.

The menus listed below remain completely accessible despite the menu lock being activated, and can be used to make adjustments if necessary:

1. Measurement values
2. Analysis
3. Display mode
- 7.2. Time & date
8. Menu lock
9. Service values

To lock the other menus, select “Menu lock on”.

To enable the menus again, select “Menu lock off”.

# Service values

## 8. - Service values

8.3.ΔTR1	10°C
8.4.ΔTR1 off	3°C
8.5.Tref On	50°C
▲ ▼	



The menu “8. Service values” can be used for remote diagnosis by a specialist or the manufacturer in the event of an error, etc.



Caution

Enter the values at the time when the error occurs e.g. in the table.

The menu can be closed at any time by pressing “esc”.

9.1.		9.21.		9.41.	
9.2.		9.22.		9.42.	
9.3.		9.23.		9.43.	
9.4.		9.24.		9.44.	
9.5.		9.25.		9.45.	
9.6.		9.26.		9.46.	
9.7.		9.27.		9.47.	
9.8.		9.28.		9.48.	
9.9.		9.29.		9.49.	
9.10.		9.30.		9.50.	
9.11.		9.31.		9.51.	
9.12.		9.32.		9.52.	
9.13.		9.33.		9.53.	
9.14.		9.34.		9.54.	
9.15.		9.35.		9.55.	
9.16.		9.36.		9.56.	
9.17.		9.37.		9.57.	
9.18.		9.38.		9.58.	
9.19.		9.39.		9.59.	
9.20.		9.40.		9.60.	

# Language

## 9. - Language


9.1.Deutsch	
9.2.English	
9.3.Español	
▲ ▼ OK	



Menu “9. Language” can be used to select the language for the menu guidance. This is queried automatically during initial commissioning. The choice of languages may differ, however, depending on the device design. Language selection is not available in every device design!

# Malfunctions

## Z.1 Malfunctions with error messages

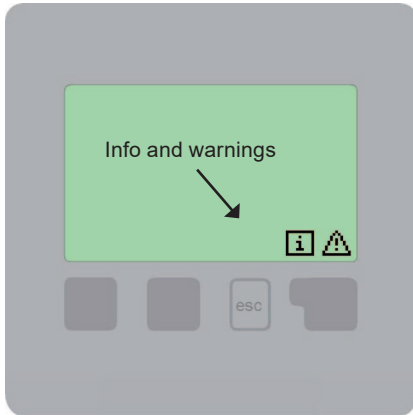

If the controller detects a malfunction, the red light flashes and the warning symbol also appears in the display. If the error is no longer present, the warning symbol changes to an info symbol and the red light no longer flashes. To obtain more detailed information on the error, press the key under the warning or info symbol.



Do not try to deal with this yourself. Consult a specialist in the event of an error!

Error messages:	Notes for the specialist:
Sensor x defective	Either the sensor, the sensor input at the controller or the connecting cable is/was defective. (Resistance table on page 5)
On / Off too often	The solar pump was switched more than 6 times in 5 minutes.
Restart	The controller was restarted, for example due to a power failure. Check the date & time!

# Fuse

## Z.2 Replacing the fuse




Repairs and maintenance may only be performed by a specialist. Before working on the unit, switch off the power supply and secure it against being switched on again! Check for the absence of power!



Only use the supplied spare fuse or a fuse of the same design with the following specifications: T2A 250V

### Z.2.1

Fuse

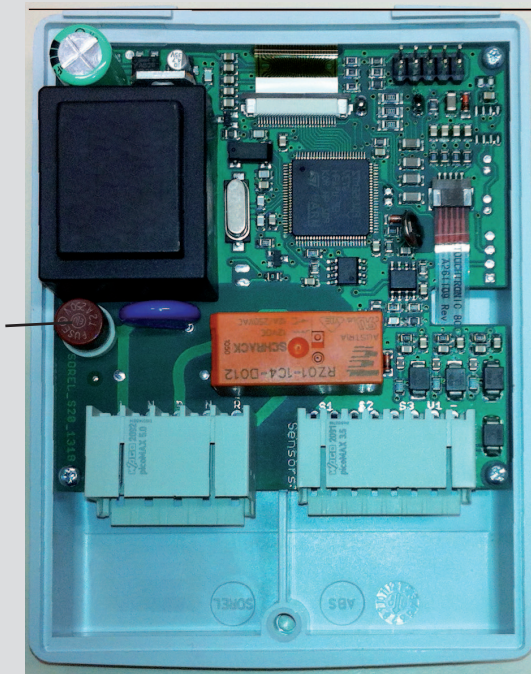

If the mains voltage is switched on and the controller still does not function or display anything, then the internal device fuse may be defective. In that case, open the device as described under C.1, remove the old fuse and check it. Exchange the defective fuse for a new one, locate the external source of the error (e.g. pump) and exchange it. Then first recommission the controller and check the function of the switch outputs in manual mode as described under 3.2.

## Z.3. Maintenance



**Caution**

In the course of the general annual maintenance of your heating system you should also have the functions of the controller checked by a specialist and have the settings optimised if necessary.

Performing maintenance:

- Check the date and time (see „7.4. - Time and Date“ on page 26 )
- Assess/check plausibility of analyses (see „2. - Statistics“ on page 17)
- Check the message log (see „2.5. - Message log“ on page 17)
- Verify/check plausibility of the current measurement values (see „1. - Measurement values“ on page 16)
- Check the switch outputs/consumers in manual mode (see „4.2. - Manual“ on page 18)
- If necessary: Optimise the parameter settings

---

Hydraulic variant set:

Commissioned on:

Commissioned by:

---

Notes:

---

Final declaration:

Although these instructions have been created with the greatest possible care, the possibility of incorrect or incomplete information cannot be excluded. Subject as a basic principle to errors and technical changes.

---

Manufacturer:

SOREL GmbH Mikroelektronik  
Jahnstr. 36  
D - 45549 Sprockhövel  
Tel. +49 (0)2339 6024  
Fax +49 (0)2339 6025  
[www.sorel.de](http://www.sorel.de) [info@sorel.de](mailto:info@sorel.de)

Your specialist dealer: